

Trouble shooting - Heatmaster open gas fire

| Issue | Cause | Solution |
|--|---|--|
| Pilot won't light | <ol style="list-style-type: none"> 1. Pressure too low 2. Faulty electrode or connection | <ul style="list-style-type: none"> • Ensure the pressure is set correctly • Check spark at electrode, if none, check lead connection. If this has not solved the problem, replace the electrode. |
| Pilot ignites but won't stay on | <ol style="list-style-type: none"> 1. Faulty thermocouple | <ul style="list-style-type: none"> • Replace thermocouple |
| Flame does not stay alight, or very little flame | <ol style="list-style-type: none"> 1. Pressure too low 2. Faulty thermocouple 3. Excessive draught | <ul style="list-style-type: none"> • Ensure the pressure is set correctly • Replace thermocouple • Ensure you have an approved gas cowl fitted correctly |