


**Seamless remote summary guide.**

**MODES**

There are 3 different operational MODES you can select on your Seamless remote.

\*To change MODES, press the MODE button which will display the mode you are operating to at the bottom of the LCD screen 'MANUAL' 'FLAME' or 'AUTO'


MODE	Description															
FLAME	<p>The unit will operate on FRONT BURNER only.</p> <ul style="list-style-type: none"> <li>To change ROOM FAN SPED, use the arrow buttons. </li> <li>ROOM FAN SPEEDS are indicated by the number 1, 2 next to the flame icon.</li> </ul>															
MANUAL (Thermostat)	<p>The unit will work towards your desired temperature set on your thermostat remote.</p> <ul style="list-style-type: none"> <li>When desired temperature is greater than 2° of the room temperature the unit will operate on <i>LEVEL 3</i> with the front and back burners and FAN speed 2</li> <li>When desired temperature is within 2° of the room temperature the unit will operate on <i>LEVEL 2</i> with the front burner and FAN speed 1</li> <li>When desired temperature is 2° over room temperature the unit will operate on <i>LEVEL 1</i> with front burner only and ROOM FANS off.</li> <li>When room temperature drops 1° below desired temperature the FAN Speed will turn back on to speed 1 and go through the above steps again</li> </ul>															
AUTO (Automatic program)	<p>The unit will operate to a set Burners and FAN SPEED at a set time. See remote manual for programming your own set times, alternatively the remote comes pre-programmed with the following settings:</p> <table border="1"> <thead> <tr> <th>Time Period</th> <th>Start Time</th> <th>Desired Temperature.</th> </tr> </thead> <tbody> <tr> <td>Period 1</td> <td>6.00 am</td> <td>20 °C</td> </tr> <tr> <td>Period 2</td> <td>8.30 am</td> <td>15 °C</td> </tr> <tr> <td>Period 3</td> <td>5.00 pm</td> <td>21 °C</td> </tr> <tr> <td>Period 4</td> <td>10.30 pm</td> <td>15 °C</td> </tr> </tbody> </table>	Time Period	Start Time	Desired Temperature.	Period 1	6.00 am	20 °C	Period 2	8.30 am	15 °C	Period 3	5.00 pm	21 °C	Period 4	10.30 pm	15 °C
Time Period	Start Time	Desired Temperature.														
Period 1	6.00 am	20 °C														
Period 2	8.30 am	15 °C														
Period 3	5.00 pm	21 °C														
Period 4	10.30 pm	15 °C														

**Flame & Fan LEVELS**

There are three set LEVELS (flame and fan combinations) the Seamless operates at:

LEVEL	Flame	Fan speed
1	FRONT BURNER	OFF
2	FRONT BURNER	1
3	FRONT AND BACK BURNER	2

Power flue fan always operates

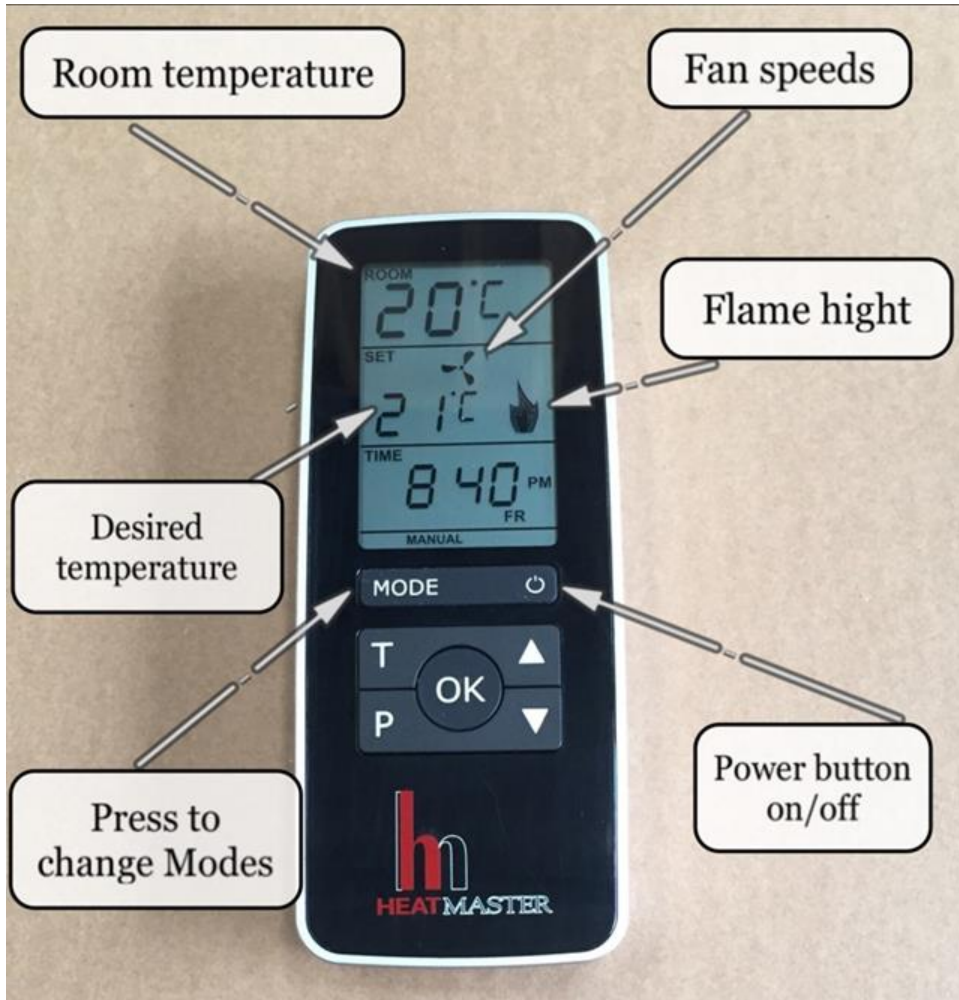

#### **Aligning your remote to your Seamless heater**

1. Turn power supply off to the unit for 2 minutes using isolation switch.
2. After turning the power supply back on and with your remote in the off position (**within the next 30 sec**), using two hands, press the following sequence of buttons; "P,T,T,UP"

The LCD display on your remote will show 'LC' (Learn Code) for 2 seconds then return to the OFF position. During this time a special code will be transmitted by the remote to the unit aligning it to your Seamless heater.