



Enviro remote summary guide.

MODES

There are 3 different operational MODES you can select on your Enviro remote.

*To change MODES, press the MODE button which will display the mode you are operating to at the bottom of the LCD screen 'MANUAL' 'FLAME' or 'AUTO'


MODE	Description															
FLAME (Preferred Setting)	<p>The unit will operate on your preferred LEVEL 1, 2 or 3 (boost).</p> <ul style="list-style-type: none"> To change LEVEL, use the up and down arrow buttons.   LEVELS are indicated by the number 1, 2 or 3 next to the fan icon. 															
MANUAL (Thermostat)	<p>The unit will work towards your desired temperature set on your thermostat remote.</p> <ul style="list-style-type: none"> When desired temperature is greater than 10°C of the room temperature the unit will operate on level 3 (boost). When desired temperature is within 2°- 9° of the room temperature the unit will operate on level 2 When desired temperature is within 2° of the room temperature the unit will operate on level 1 When desired temperature is 1° over room temperature the unit will turn off When room temperature drops 1° below desired temperature the unit will turn back on and go through the above steps again 															
AUTO (Automatic program)	<p>The unit will operate to a set LEVEL at a set time. See remote manual for programming your own set times, alternatively the remote comes pre-programmed with the following settings:</p> <table border="1"> <thead> <tr> <th>Time Period</th> <th>Start Time</th> <th>Desired Temperature.</th> </tr> </thead> <tbody> <tr> <td>Period 1</td> <td>6.00 am</td> <td>20 °C</td> </tr> <tr> <td>Period 2</td> <td>8.30 am</td> <td>15 °C</td> </tr> <tr> <td>Period 3</td> <td>5.00 pm</td> <td>21 °C</td> </tr> <tr> <td>Period 4</td> <td>10.30 pm</td> <td>15 °C</td> </tr> </tbody> </table>	Time Period	Start Time	Desired Temperature.	Period 1	6.00 am	20 °C	Period 2	8.30 am	15 °C	Period 3	5.00 pm	21 °C	Period 4	10.30 pm	15 °C
Time Period	Start Time	Desired Temperature.														
Period 1	6.00 am	20 °C														
Period 2	8.30 am	15 °C														
Period 3	5.00 pm	21 °C														
Period 4	10.30 pm	15 °C														

Flame & Fan LEVELS

There are three set LEVELS (flame and fan combinations) the enviro operates at:

LEVEL	Flame	Fan
1	1 low	1 low
2	2 high	2 high
3	2 high	3 (boost)

*Fans cannot be turned off

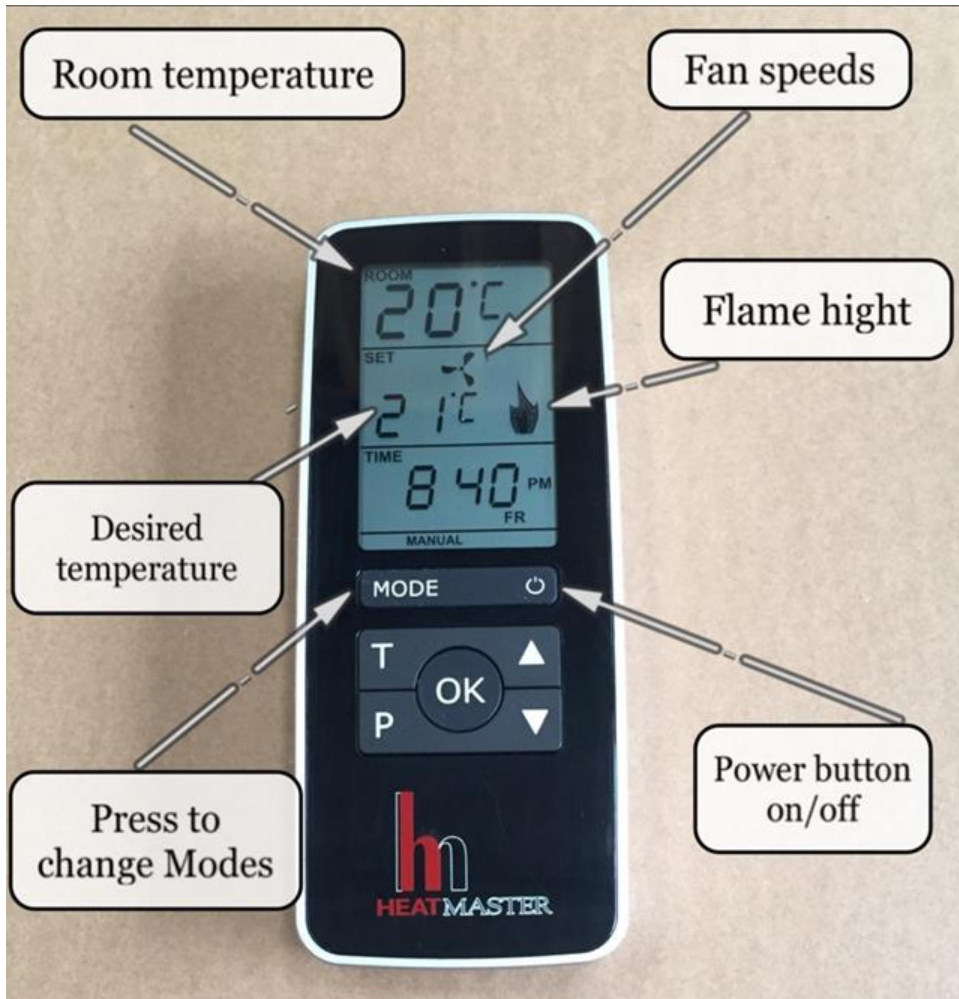

Aligning your remote to your Enviro heater

1. Turn power supply off to the unit for 2 minutes using isolation switch.
2. After turning the power supply back on and with your remote in the off position (within the next 30 sec), using two hands, press the following sequence of buttons; "P,T,T,UP"

The LCD display on your remote will show 'LC' (Learn Code) for 2 seconds then return to the OFF position. During this time a special code will be transmitted by the remote to the unit aligning it to your enviro heater.